

MUSE

M-15CR

Digital Alarm Clock Radio

User Manual



**PLEASE READ THE INSTRUCTION CAREFULLY
BEFORE OPERATING THE UNIT.**

LISTENING TO THE RADIO

1. Press **ON/OFF** (4) button to turn on the radio.
2. Switch to FM or MW position with the **BAND** (10) selector.
3. For a better reception in FM, extend the antenna (18). In MW rotate the unit.
4. Adjust the volume (12) to the desired level.
5. Select your desired radio station with (11) and (16).
6. To stop listening to the radio, press **ON/OFF** (4) again.

SETTING THE ALARM AND WAKE-UP MODE

1. Slide the **SET** (1) switch to select **WAKE 1** or **WAKE 2** setting mode.
2. Press **REV** (2) or **FWD** (3) to set wake time.
3. Slide the **SET** (1) switch to lock.
4. To wake up to radio follow 1 to 6 in "LISTENING TO THE RADIO". Press **Wake 1** (8) or **Wake 2** (9) repeatedly to select wake source for the corresponding wake setting. When wake to radio is selected, the **♪** indicator lights.
5. To wake up to the alarm sound, press **Wake 1** (8) or **Wake 2** (9) repeatedly to select wake source for the corresponding wake setting. When wake to tone is selected, the **🔔** indicator lights.

TURNING OFF ALARM

- * Silence the alarm momentarily**
Press **SNOOZE** (5), **NAP** (6), **SLEEP** (7), **REV** (2) or **FWD** (3) to turn the alarm off temporarily. The alarm will sound again when the snooze period is over.
Note: The "quiet" period is from 1 minute to 30 minutes (the default time is 9 minutes). Set "quiet" period as follow:
1. Press and hold **SNOOZE** (5).
2. Press **REV** (2) or **FWD** (3) to adjust snooze time. Release button, then the "quiet" period is set.
- * Stop the alarm**
Press **ON/OFF** (4). Then, the alarm will be on the following day at the same time.
- * Cancel Wake Settings**
Press the **Wake 1** (8) or **Wake 2** (9) to cancel the corresponding wake function permanently. Corresponding wake indicator turns off.

SLEEP TO MUSIC

Select FM or MW (10) then press **SLEEP** (7), the sound will come on for 59 min. If you want to change this sleep time, press and hold **SLEEP** (7), and use **REV** (2) or **FWD** (3) to adjust to the desired time. If you want to turn off the music earlier, press **SNOOZE** (5) or **ON/OFF** (4).


NAPFUNCTION

- This function wakes you up after a short period of time. Only alarm sound can be selected for Nap.
1. Press and release the **NAP** (6) button. The Nap indicator flashes.
 2. During this period, adjust nap time by pressing **REV** (2) or **FWD** (3).
Note: The nap range is from 10 minutes to 2 hours. (the default time is 20 minutes)
 3. Press **NAP** (6) to confirm nap time or if no button is pressed after 5 seconds, the clock will be shown. The Nap indicator lights.
 4. To stop the Nap alarm, press **NAP** (6) or follow "Turning off Alarm".
 5. To cancel NAP function, press and hold **NAP** (6) until the Nap indicator turns off.

GB - 2

LOCATION OF CONTROLS

1. SET (TIME/ WAKE 1/ WAKE 2/) switch
2. ◀ REV button
3. ▶ FWD button
4. ON/OFF button
5. SNOOZE button
6. NAP button
7. SLEEP button
8. WAKE 1 button
9. WAKE 2 button
10. BAND selector : MW/ FM
11. TUNING knob
12. VOLUME control
13. Digital Display
14. Alarm ON indicators :
 1. 🔔 wake 1 to tone
 1. 🎵 wake 1 to music
 2. 🔔 wake 2 to tone
 2. 🎵 wake 2 to music
15. NAP indicator
16. Dial scale and pointer
17. AC Power cord
18. FM wire antenna
19. Battery backup compartment

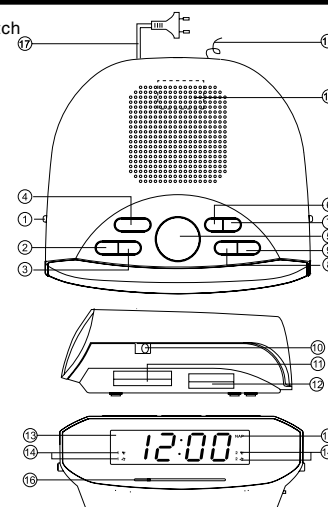

POWERSUPPLY

AC power : 230-240V ~ 50 Hz (CE standard)
DC power : 9V battery type 006P (not provided) for clock back-up system only.
An alkaline type battery is recommended. For optimum performance, this battery should be replaced every 6 months.

1. Insert the AC power cord (17) into a convenient standard AC wall outlet.
2. Connect the 9V battery inside the compartment at the bottom of the unit (19).

BACK-UP SYSTEM : Ensures that the unit will continue to operate as normal during an AC power disruption (in order to preserve the battery life the display will not light). All clock settings will be kept in the memory, however, the clock time may require adjustment for exact accuracy. If this battery is not installed, the display will blink **8:00** to indicate that you have to redo the time and alarm settings.

Note: When the battery backup functions, the digital display will not light, however, the wake function still occurs during the power interruption if remaining battery power is adequate.

SETTING THE TIME

1. Slide the **SET**(1) switch to TIME to enter clock setting mode.
2. Press **REV**(2) or **FWD** (3) to set the time.
3. Slide the **SET** (1) switch to lock.

GB - 1

MOREINFORMATION

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

ATTENTION : To reduce the risk of electric shock, do not remove the cover. There are no user serviceable parts inside the unit. Refer all servicing to qualified personnel.



The lightning flash with arrowhead symbol within the triangle is a warning sign alerting the user of "dangerous voltage" inside the unit.



The exclamation point within the triangle is a warning sign alerting the user of important instructions accompanying the product.

WARNING

- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Attention should be drawn to the environmental aspects of battery disposal.

IMPORTANT

- DO NOT THROW BATTERIES IN FIRE !
- THE APPARATUS SHALL NOT BE EXPOSED TO DRIPPING OR SPLASHING.
- ENSURE A MINIMUM DISTANCE OF 5CM AROUND THE APPARATUS FOR SUFFICIENT VENTILATION.
- ENSURE THAT THE VENTILATION IS NOT IMPEDED BY COVERING THE VENTILATION OPENINGS WITH ITEMS, SUCH AS NEWSPAPERS, TABLE-CLOTHS, CURTAINS, ETC.
- DO NOT PLACE NAKED FLAME SOURCES, SUCH AS LIGHTED CANDLES ON THE APPARATUS.
- TAKE ATTENTION TO THE ENVIRONMENTAL ASPECTS OF BATTERY DISPOSAL.
- USE THE APPARATUS ONLY IN MODERATE CLIMATES (NOT IN TROPICAL CLIMATES).
- DO NOT EXPOSE THE APPARATUS TO DRIPPING OR SPLASHING.
- DO NOT PLACE OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, ON THE APPARATUS.
- BATTERIES SHALL NOT BE EXPOSED TO EXCESSIVE HEAT SUCH AS SUNSHINE, FIRE OR THE LIKE.
- THE MARKING PLATE IS LOCATED ON THE BACK ENCLOSURE.
- MAINS PLUG IS USED AS THE DISCONNECT DEVICE AND IT SHALL REMAIN READILY OPERABLE. TO BE COMPLETELY DISCONNECTED THE POWER INPUT, THE MAINS PLUG OF THE APPARATUS SHALL BE DISCONNECTED FROM THE MAINS COMPLETELY. THE MAINS PLUG SHOULD NOT BE OBSTRUCTED OR SHOULD BE EASILY ACCESSED DURING INTENDED USE.
- UNDER THE INFLUENCE OF ELECTRICAL FAST TRANSIENT OR/AND ELECTROSTATIC PHENOMENON, THE PRODUCT MAY MALFUNCTION AND REQUIRE USER TO POWER RESET.



If at any time in the future you should need to dispose of this product please note that Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.(Waste Electrical and Electronic Equipment Directive)

CE

GB - 3